

Single-use USB Temperature Data Logger



User Manual V1.0
For ULogs9


Products Contents

Single-use USB Temp Data Logger 20
User manual x1

Main Function

- Temperature measurement and recording
- Export data report as PDF/CSV file through USB
- IP66 waterproof
- LCD display
- Alarm checking

Power On and Record

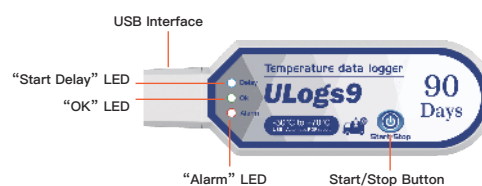

- 1、 Press and hold the button for 3 seconds to start the data logger in the shutdown status.
- 2、 The blue LED flashes once every 10 seconds, indicating that the device is in delayed recording mode and hasn't started recording.

1

Specification

Model	ULogs9
Sensor	Internal temperature sensor
Battery	CR2032
Size	83.5*27.7*7.5mm
Weight	16g
Waterproof Level	IP66
Operation Temperature	-30°C~+70°C/-22°F~+158°F
Temperature Accuracy	± 0.5 °C (-20°C~+40°C) ;±1°C (others)
Time Zone	UTC+0:00 (Default or Customizable)
Log Interval	5 mins (Customizable from 1min to 24 hrs)
Log Duration	90 days (Customizable from 7 to 360 days)
Start Delay	30 mins (Default or Customizable)
Alarm Preset	Customizable, <2°C or >8°C
Temperature Unit	°C/°F

2

Recording Status

None-alarm Status: green LED light flashing very 10 seconds, indicating the data logger is recording normally within the preset value.

Alarm Status: red LED light flashing every 10 seconds, indicating the logger is recording and the temperature exceeds the preset value.

Stop Recording

Press and hold the button for 3 seconds until it is turned off, or plug the data logger into the USB port of the computer.

Note:

1. During recording, if red LED light keeps on, indicating that the device is damaged.
2. This product is a disposable data logger. In recording mode, please do not press and hold the button, or plug the device into the computer. Or the device will end recording.
3. The first time you plug the device into your computer, the device flashes blue to indicate that the PDF report is being generated. Please do not unplug the USB device, or it will cause part of the data points missin.

3