


GT SONIC- ST Series Industrial Ultrasonic Cleaner

GT SONIC®



GT SONIC ST-series units is our 2016 new design model with power & heater, timer adjustable. Improved PCB design and 2mm thickness SUS304 tank offers powerful and reliable cleaning at an affordable price.

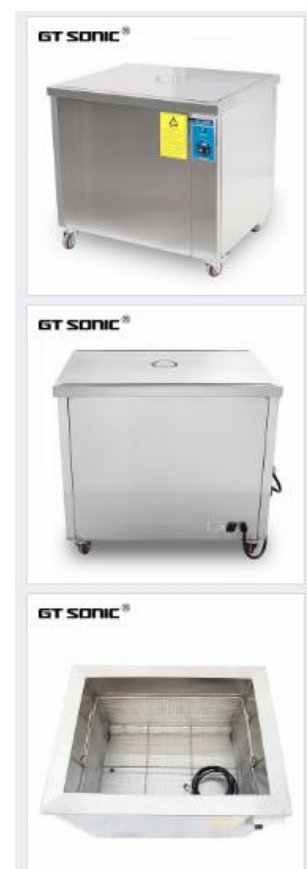

Features

1. Ultrasonic power: 0-100% adjustable.
2. Time setting: 0-60min or untimed.
3. Heating: 30-100°C.
4. Ultrasonic frequency: 28kHz or 40kHz.
5. Whole machine made of SUS304 stainless steel, 2mm thickness tank for acid-proof, anti-corrosive.
6. Industrial grade ultrasonic transducer, moisture-proofed PCB.
7. Advanced generator, sweep frequency, high quality, better effect.
8. Fully portable, 36L and above volume machines are with wheels, locking wheels for stability.
9. With free lid and stainless steel SUS304 basket.
10. Customized according to customer's request.

Model	Tank size	Unit size	Volume	Ultrasonic power	Ultrasonic frequency	Heating power	Timer	Heating temperature
	L×W×H(mm)	L×W×H(mm)	(L)	Normal (W)	(kHz)	(W)	(MIN)	(°C)
ST53A/B	500×350×300	645×496×615	53	900	28/40	2000	0 to 60	30-100
ST77A/B	550×400×350	687×540×610	77	1200		3000	0 to 60	30-100
ST105A/B	600×500×350	745×645×665	105	15020		4000	0 to 60	30-100
ST144A/B	600×600×400	745×745×715	144	1800		5000	0 to 60	30-100
ST189A/B	700×600×450	845×745×765	189	2400		6000	0 to 60	30-100
ST288A/B	800×600×600	942×745×915	288	3000		7000	0 to 60	30-100