



MicroLogPRO


environmental monitoring

The MicroLogPRO solution offers two low-cost portable data logging systems to meet a broad spectrum of data monitoring needs.



External sensor input

Analysis software

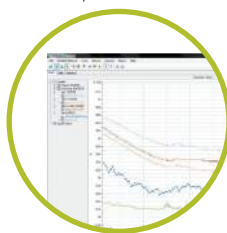

NEW!

Compatible with FourtecLite
An Android mobile application utility that enables reviewing sampling sessions history, configuring devices and monitoring online sampling sessions.

- Stand-alone monitoring with up to 52K sample memory
- Internal temperature and humidity sensors with high accuracy and resolution
- Multi-function keypad for manual time stamp, run/stop activation
- Mini-USB port for PC communication and firmware updates
- 4-digit data display
- Built-in LED for logging and alarm indication
- Replaceable battery
- boomerang for automatic PDF data report
- Free DataSuite software for data monitoring, analysis and logger
- Water and dust resistant enclosure



Sense it. Manage it.

Solutions



COLD CHAIN



HOSPITAL
ENVIRONMENTS



PHARMA
INDUSTRY



WAREHOUSE
STORAGE



TRANSPORTATION

MicroLogPRO Typical Operating Method



1
Record data using
internal or external
sensors



2
USB data download
to PDF report with
automatic email delivery



3
Data analysis
using integrated
DataSuite software

DataSuite Software for MicroLog

The DataSuite software provides security for your products with online monitoring and control of the entire application environment.

Supported Operating Systems:


Supported Operating Systems:
Windows® XP SP3 / Vista / 7 / 8.1
(32 and 64 Bit)

Minimum Hardware Requirements:

Pentium 4.2 GHz Processor or
better, 512 MB RAM, 250 MB
available disk space


Data View Features

Real-time data in multiple displays
(Graph, Table, Statistics)

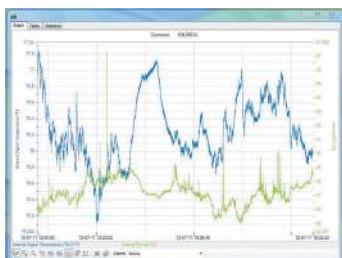

Boomerang™ Feature

Configure logger setup to
automatically create and email PDF
data report when connected to
computer via USB

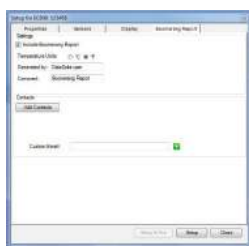

Report Module

The Report module provides the
Microlog user with an intuitive
interface for creating and
generating reports which have many
parameters garnered from the
PicoLite units and software. Each
report can be emailed to a selected
distribution list, at pre-defined time
intervals, in PDF and Excel format.




Alarm Features

Alarm setup supporting two levels
– Low and High – plus email & SMS
notifications in the event of an alarm



Analysis Features

Dew point analysis, FO Pasteurization,
histogram, MKT, statistics with export
to Excel and CSV formats

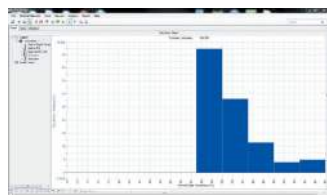

Specifications

	EC800	EC850
Measurement Inputs	Two (one internal, one external)	Three (two internal, one external)
Internal Sensor Range	-40 to 80 °C	Temp: -40 to 80 °C RH: 5 to 95%
Internal Temperature Accuracy	0 to 60 °C: ±0.3 °C After calibration: -40 to 0 °C: ±0.3 °C 60 to 80 °C: ±0.3 °C	± 0.3 °C
Internal Temperature Resolution	0.02 °C or better	0.015 °C
Internal Humidity Accuracy	N/A	± 2 %
Internal Humidity Resolution	N/A	0.05 %
External Input Support	NTC Temperature -50 to 150°C	
Sampling Memory	52,000 samples (over 3 channels)	
Sampling Rate	Minimum: Once every second Maximum: Once every 18 hours	
Auto PDF & Email Delivery (Boomerang Feature)	✓	
LCD	Four-digit, 7-segment LCD with decimal point	
Dew Point	LCD and software indication	
LED	LCD and software indication	
PC Interface	Mini USB	
Infrared Printout	None	
Power Supply	2/3 AA 3.6V lithium battery	
Battery Life	~ 2 years depending on sampling rate and operating conditions	
Dimensions	Diameter: 72 mm , Thickness: 22.9 mm	
Weight	55 g	
Wall Mount	Cradle accessory	
Standards Compliance	CE, IP65, EN12830	CE, IP54, EN12830



FOURTEC

www.fourtec.com | info@fourtec.com

© 2021 Fourtec - Fourier Technologies Ltd. All rights reserved. Fourtec - Fourier Technologies Ltd. logos and all other Fourtec product or service names are registered trademark or trademarks of Fourtec - Fourier Technologies Ltd. All other registered trademarks or trademarks belong to their respective companies. P/N BK180, Rev 5.15